




Fitting Guide for Lionsele® W1 — wiper for rods

1  For Health & Safety reasons, shut down the hydraulic system before installing your new Wiper


Shut off power

2  Check the wiper and its housing. Ensure the housing is the recommended size, with shoulder recess to retain the wiper.


Check housing suits the wiper

3  Remove old wiper, then thoroughly clean the housing.

Remove old wiper. Clean the housing

4  Lightly lubricate the wiper prior to assembly.

Lubricate the wiper

5  Ensure the wiper lip is pointing outwards. Then distort the wiper in a crescent fashion and open it out into the housing groove.


Distort wiper & open into recess

Fitting Guide for Lionsele® W1 — wiper for rods

6

Check that wiper is seated firmly around circumference, and is clipped-in behind the shoulder recess. Insert rod into position.

Check wiper is seated firmly. Insert rod

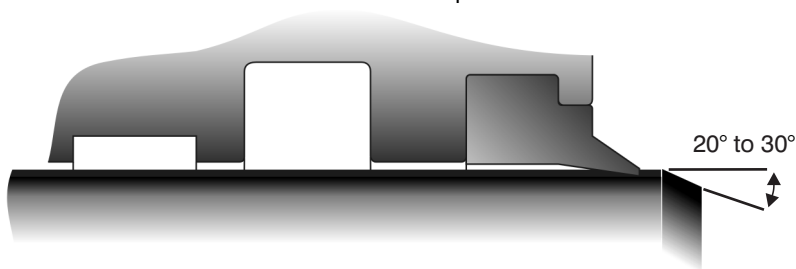

Material Safety Data Sheets are available on request

James Walker & Co Ltd, Gote Brow, Cockermouth Cumbria CA13 0NH, UK
Tel: +44 (0)1900 823555 Fax: +44 (0)1900 898354 Email: cockermouth@jameswalker.biz

www.jameswalker.biz

Information in this publication and otherwise supplied to users is based on our general experience and is given in good faith, but because of factors which are outside our knowledge and control and affect the use of products, no warranty is given or is to be implied with respect to such information. Unless governed by type approval or contract, specifications are subject to change without notice. Statements of operating limits quoted in this publication are not an indication that these values can be applied simultaneously.

To ensure you are working with the very latest product specifications, please consult the relevant section of the James Walker website: www.jameswalker.biz.

CPC Level 09 AM08 RC01 141112